

## Metal Clad - Fused spur unit


These instructions should be read carefully and retained after installation for further reference and maintenance.

### SAFETY

- Before installation/maintenance, ensure that the mains supply is switched off and the circuit fuses are removed or circuit breakers switched off
- This product must be installed in accordance with the latest edition of the IEE Wiring Regulations and current Building Regulations. If in any doubt, consult a qualified electrician
- 230V 50Hz
- Do not overload this accessory or subject it to conditions outside its rating
- Please recycle

### FLEX OUTLET METHOD METAL FRONTPLATES

#### FRONT EXIT

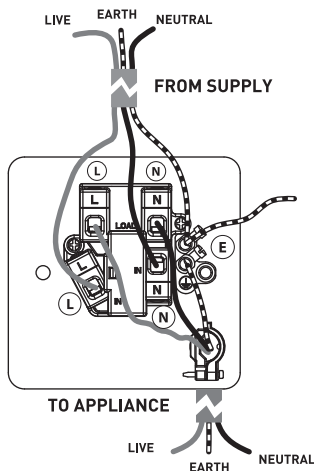

### INSTALLATION

- Connect this accessory as per the relevant diagrams
- All Earth connections must be made and maintained. Use green/yellow sleeving on earth conductors that are not insulated
- Fit the unit into a suitable wall box taking care not to compress, damage or trap any cables, and secure with the screws provided
- Check all connections are secure

### WIRING

- **L - LIVE** = red or brown
- **N - NEUTRAL** = black or blue
- **⬚- EARTH** = green and yellow
- All Metal Clad products **MUST** have an earth connection between the front plate and back box
- Use green and yellow sleeving on earth conductors that are not insulated

**IF IN ANY DOUBT PLEASE CONSULT A QUALIFIED ELECTRICIAN**  
**SBSEP16V1**

#### REAR EXIT

