

Tile Removing Chisel



USER INSTRUCTIONS

For use in tile, plaster, render removal applications.

Prior to using chisels, please ensure your machine has the 'chisel only' function as they are designed to be used on this function only.

Before using this product the chuck shank should be thoroughly lubricated.

Minimal force should be applied when being used.

After using the product continuously for 10-15 minutes the chisel must be removed from the chuck and allowed to cool at room temperature. Never try to accelerate cooling of shanks by dipping in water as this can cause thermal shock, crack the chisel and cause early failure.

Lubrication must be re-applied before re-using.

Products can fail on the shank due to temperature build up of 200°C.

Misuse of the product will decrease the maximum time usage significantly. Shank failure due to temperature build up is not warranted.

