







(1)







CRI



۶Õ°C





50/60

Hz

Installation Instructions

Emergency Bulkhead 3W LED

Selectable Emergency Function MANUAL-TEST - SELF-TEST





Please read these instructions carefully before installation

Leave a copy for the user/maintenance engineer for future reference

Important Safety Information


This product is factory pre-set to operate in MANUAL-TEST mode. Selector switch is set to position ON For SELF-TEST operation mode, the selector switch must be set to position 1 before installation The selector switch is located inside the product on the main PCB



Refer to the Test Record document for MANUAL-TEST and SELF-TEST functions and testing procedures

- It is recommended that this luminaire is installed, inspected and maintained by a qualified electrician.
- Installation should be carried out in accordance with the latest edition of the IET Wiring Regulations (BS 7671) and the latest Building Regulations. If in doubt, consult a qualified electrician.
- These products are designed for connection to a 220-240V~50/60Hz supply.
- · Before commencing any installation or maintenance work, ensure that the electrical mains supply is isolated and circuit fuses are removed or switched off.
- All electrical connections must be tight with no loose strands including factory made connections.
- Ensure that there is adequate free air ventilation around the luminaire.

- · Please note the IP rating of this luminaire when deciding the location for installation.
- This luminaire is suitable for indoor and outdoor use.
- This is a Class II construction luminaire.
- This luminaire is suitable for use in ambient temperatures of 0°C to +50°C.
- MCBs may require to be uprated to allow for increased initial inrush current.
- · Do not carry out any insulation resistance tests with the luminaire connected to the circuit.
- · The LED light source fitted in this product is non replaceable.

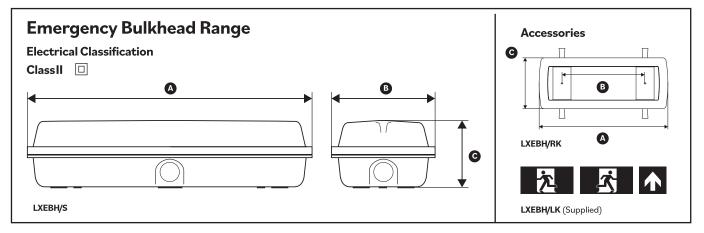

Technical Specifications


Part No.	Description	Wattage	Measurement $\mathbf{\hat{a}} \times \mathbf{\hat{g}} \times \mathbf{\hat{g}}$	Lumen Output	IP Rating	CRI	Class Rating	Colour Temperature
LXEBH/S	Emergency Bulkhead LED	3W	350×110×60mm	150Lm	IP65	>80	ClassII	6000K
Accessories								
LXEBH/RK	Recessing Kit	-	395×255×156mm	Semi-recessing kit C/W spring clip fixings				
LXEBH/LK	Universal Legend Kit	-	-	Self adhesive ISO pictograms to configure Up, Down, Left or Right direction				

Important Installation Information

Select a suitable mounting position and use the correct fixings for the type of surface. Ensure that there is adequate free air ventilation around the luminaire at all times. Do not install this product onto damp or newly plastered walls or ceilings. Always switch off and isolate the mains power supply before commencing installation.

- 1. Remove the screws at each end of the front of the luminaire to remove the diffuser.
- 2. Hinge the LED gear tray open by pushing apart the two release tabs marked 'PRESS'
- 3. Choose the mounting surface and mark the position of the two fixing holes of the luminaire base at 255mm centres.
- 4. Select a mains cable entry point on the base of the luminaire. Entry points are available through the bottom, both ends or one side of the housing. Drill to a suitable size for cable entry and ensure that appropriate grommets or compression couplings are used to maintain the IP65 rating where required.
- 5. Drill the two fixing holes to a size to suit the fixing screws and mount the luminaire base to the surface. Ensure that the fixing points are sealed to maintain the IP65 rating of the luminaire.
- 6. Feed the mains supply cable through the cable entry point and connect to the terminal block as shown in fig. 1 as per the function mode required. Ensure that the correct polarity is observed.

- 7. Connect the emergency battery pack lead to the PCB by connecting the socket to the plug marked 'BATT' on the PCB ensuring correct orientation.
- 8. Complete the installation date on the label adjacent to the battery pack.
- 9. Relocate the LED gear tray by pushing down on to the two fixing tabs ensuring that it is secure.
- 10. Refit the diffuser using the two screws and ensure that there is a good seal to maintain the IP65 rating.
- Reconnect the mains power supply, test for satisfactory operation and check that the green LED charge indicator illuminates.
- 12. The batteries should be charged for a minimum of 24 hours before carrying out a full discharge test to check that they are charging correctly and that the maintained 3 hour duration is being achieved.
- 13. The emergency luminaire test record should be completed as required and left with the end user.

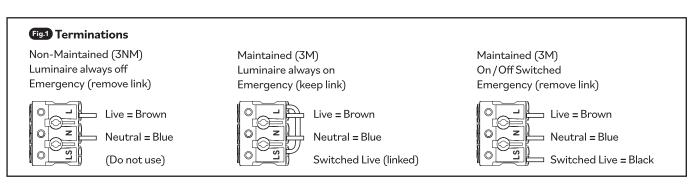

Accessories

Recessing Kit Installation (optional) - LXEBH/RK

- 1. Prepare the ceiling and cut out an aperture 355mm x 125mm
- 2. With the spring clips held in the upward position, insert the back of the frame into the aperture and allow the spring clips to locate onto the top of the ceiling to provide a secure installation.
- 3. Drill the two fixing points in the base of the luminaire at 255mm centres and secure the base to the two tapped holes on the brackets of the recessing kit using suitable fixing screws.

Self Adhesive Legends (supplied) - LXEBH/LK

Fit the legends on to the front of the diffuser in the correct orientation to suit the application if required.

Emergency Luminaire Connection and Testing

- The Emergency luminaire requires an unswitched live supply to ensure that the batteries remain charged.
- Ensure that the battery cells supply cable is connected to the Emergency module before mains power is restored.
- 3. Once installed, the batteries must be charged for a minimum of 24 hours before carrying out a full discharge and commissioning test to check that they are charging correctly and that the maintained 3-hour discharge duration is being achieved. The date should be noted on the battery. The Green LED Indicates that the batteries are charging.
- 4. Emergency luminaires should be routinely inspected and tested in accordance with current BS 5266 guidelines. Refer to BS 5266 & BS EN 50172 for full Emergency Lighting requirements and testing procedures
- 5. A log report must be completed and kept for the periodic test procedure. A copy of the Emergency test record sheet is included with this product. Further copies can be requested at sales@luxna.co.uk
- A completed copy of the Emergency test record sheet must accompany any product returned to the manufacturer.

Batteries: The battery cells inside an emergency product are a consumable replaceable item. The batteries have a normal operating designed service life of 4 years and must be replaced in a timely manner to ensure that the integrity of the emergency lighting system is maintained. The battery cells actual service life can be shortened by several variable factors including (but not limited to): Type of installation environment, Room temperature, Number of charge/discharge cycles, power supply interruptions etc. The product should be tested and maintained regularly according to the details within the instruction manual. Should the battery cells fail to provide the minimum rated discharge duration of 3 hours at any time during the products service life, they must be replaced. Emergency luminaires must not be installed in areas where the ambient area temperature is above or below the recommended operating temperature range 0°C to +50°C

Warranty: This product is protected by guarantee in the UK and EU for a period of 5 years warranty from the date of purchase against any defects in materials or workmanship. Should this product fail during the warranty period it will be repaired or replaced with the same or equivalent product free of charge, subject to providing the original receipt/invoice or proof of the original date of purchase and return of the faulty unit. If in our sole discretion, we are unable to repair or replace a defective product, we will refund the purchase price of the product. The warranty is invalid if in our judgment the product fails due to incorrect installation not conforming to our product instructions or installation within an improper working environment. The warranty will not apply if the product fails due to damage in storage, shipment, accident or misuse. Modification to the product in any way or removal of the batch number will void the warranty. Luxna Lighting does not accept responsibility for any installation, labour or travel costs which may be associated with the replacement or return of any faulty products. Our maximum liability under the terms of this warranty is limited to the purchase price of the product. Your statutory rights are not affected. Luxna Lighting reserves the right to alter product specifications without prior notification. Terms and conditions are also subject to change without prior notice.