

OPERATING INSTRUCTIONS

HOW TO USE:

FOR WHITE MODES:

Press right button for white modes.

- Press 1 time for High.
- Press 2 times for Med.
- Press 3 times for Low.

FOR DIMMING:

Press and hold in any white light mode to dim.
Light will flash at highest and lowest settings. Release to set light level.

For white last memory setting, long press the right button. The light will come on in high and then go to the last setting.

FOR COLOR MODES:

Press left button for color modes.

- Press 1 time for Red.
- Press 2 times for Green.
- Press 3 times for Flashing Red.

OFF After 2 seconds in any mode, next press will be off.

HOW TO POWER:

HYBRID POWER: RUNS ON PRIMARY BATTERIES (AAA) OR A RECHARGEABLE BATTERY

TO OPEN BATTERY DOOR:

- The power pack is located on the back of the head strap.
- · Lift latch to unlock battery door.
- Close and press latch to lock.

NOTE: Primary batteries and rechargeable battery cannot be used at the same time.

TO USE PRIMARY BATTERIES (AAA) & CARTRIDGE:

- Load battery cartridge with 4 AAA cells following the orientation marks on the cartridge.
- Open battery door and insert the battery cartridge following the orientation marks inside the battery compartment and on the cartridge.

TO USE THE RECHARGEABLE BATTERY:

- Insert the rechargeable battery following the orientation marks on the battery and battery compartment.
- $\bullet\,$ For charging, the rechargeable battery can be left in the light or removed.
- Light must be turned off during charging if rechargeable battery is left inside the light.
- Light may operate on primary batteries while rechargeable battery charges outside of the light.
- To charge use included USB cord and plug battery into any USB charging port.

RECHARGEABLE BATTERY CHARGE INDICATOR:

- The rechargeable battery has a charge indicator on the top of the cell. (must remove from light to see)
- $\bullet\,$ Individual LEDs will light up when the battery reaches the 25%, 50%, 75%, and 100% charged.

LOW BATTERY INDICATOR:

 When the light is in operation, a colored LED will flash 3 times when the battery is low. The rechargeable battery will need to be charged or AAA batteries will soon need replaced.

DESIGN FEATURES:

• Attaches to hard hats or helmets

TO ATTACH:

- 1. Ensure surface of the helmet is clean and oil free.
- 2. Adjust head strap to fit size of hard hat/helmet.
- 3. Place head strap around hard hat/helmet and position accordingly.
- 4. Remove film from one side of the double-sided tape and attach to each clip, keeping film over other side.
- 5. Fit two of supplied attachment clips on the front of hard hat/helmet. (Figure A)
- 6. For front two clips, remove film off other side of double-sided tape and attach to hard hat/helmet to hold in place.
- 7. Fit two of supplied attachment clips on back of hard hat/helmet. (Figure B)
- 8. For rear two clips, remove film off other side of double-sided tape and attach to hard hat/helmet to hold in place.
- 9. Head strap can be removed and reattached to helmet without removing the attachment clips.

