

# Energizer®

## PRO SERIES

### HYBRID WORK LIGHT

THE ENERGIZER PRO SERIES WORK LIGHT offers versatile lighting options, functioning as both an area and directional light. Its hybrid power system ensures you always have light when you need it by operating on 3 AA or rechargeable batteries. It also includes a power bank with a USB outlet to charge devices.

Built to withstand tough conditions, this work light is durable, waterproof, and dustproof. Additional features include a hanger hook, adjustable legs for directing light, a non-slip grip, tripod adaptability, magnets for attachment and storage, and a rechargeable battery life indicator—all in one light.

**3**  
MODES

AREA LIGHT

POWER  
BUTTON

HIGH CRI  
FOR HIGH  
DEFINITION  
COLOR CLARITY

+ DIRECTIONAL LIGHT

HYBRID POWER

CHARGING  
& BATTERY  
INDICATOR

CHARGE  
DEVICE

BATTERY  
INSERTION

AA

RECHARGEABLE

CHARGE  
LIGHT

HANGER HOOK

MAGNETS FOR  
ATTACHMENT  
AND STORAGE

TRI-POD  
ADAPTABLE

ADJUSTABLE LEGS  
TO DIRECT LIGHT

## OPERATING INSTRUCTIONS

### HOW TO USE:

Press power button to turn on.

**FOR AREA LIGHT:**

- Press 1 time for High.
- Press 2 times for Medium.
- Press 3 times for Low.

**FOR DIRECTIONAL LIGHT:**

- Press and hold button in any mode for directional light.

**OFF** Press button in any mode after 2 seconds to turn off.

### HOW TO POWER:

#### HYBRID POWER: RUNS ON RECHARGEABLE OR PRIMARY (AA) BATTERIES

- Rechargeable batteries and primary batteries (AA) cannot be used at the same time.
- Light may be used in low mode while charging (in or out) but charging time will be increased.
- For best charging performance, charge (in or out) with the light turned off.

#### TO CHARGE DEVICE

- Connect the device's cable to the charging port, then plug in the device to start charging.
- The light cannot be changed while it's being used to charge a device.

#### CHARGING INDICATOR

Charging Indicator light is located above the power button.

- Red = Charging Light
- Green = Charging Light Complete

#### TO USE RECHARGEABLE BATTERIES

- Use screwdriver to open bottom door to access batteries
- Insert the rechargeable batteries following the orientation marks on the batteries and battery compartment.
- Keep rechargeable batteries in the light to charge.
- Connect the provided USB cable to the light, then plug it into any USB charging port.

#### BATTERY INDICATOR

The battery indicator light is located above the power button.

After the light is turned on, the battery indicator will illuminate for ~5 seconds.

The battery indicator is for the rechargeable battery use only.

- Green = more than 50%
- Yellow = 25%-50%
- Red = less than 25%
- Flash Red = less than 10%

#### TO USE PRIMARY BATTERIES (AA)

- Use screwdriver to open bottom door to access batteries.
- Insert the AA batteries following the orientation marks on the batteries and battery compartment.

### DESIGN FEATURES:

#### MULTIPLE OPTIONS FOR HANDSFREE USE:

- Hanger Hook, Magnet, Tripod Adaptable, Adjustable Legs
- Linkable using magnet attachments.

