

1) Holding the key, turn the barrel so that the black marker is in line with the key as shown.




2) Place the barrel through the hole in the door with the key and black marker still in the vertical position.

Use the large nut to lock the barrel in position against the door.



3) Place the cam on to the end of the barrel (as shown in image) so that the black markers are in line.

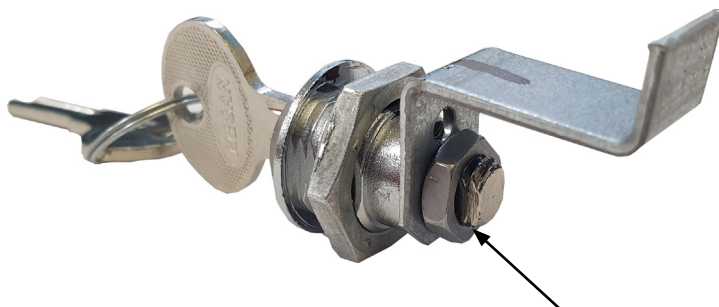

4) Secure the cam in place using the small nut as shown in the image.