
## Safety Weatherproof Cable Connector Wiring Instructions

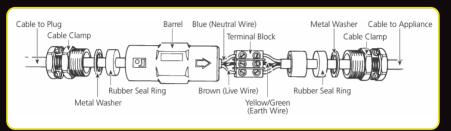

## WIRING INSTRUCTIONS

- 1. Dismantle the cable connector as shown in the diagram by unscrewing both end cable clamps. The internal components can then be released from inside the barrel by gently tapping on a work surface (check that all parts are present).
- 2. Thread the cable through the components as shown in the diagram. When threading through the rubber seal ring, the centre rings will automatically push out and the ring will adjust itself to the circumference of the cable used. Discard the centre rings that fall out.
- 3. Connect the wires to the terminal block in the direction shown in the diagram making sure that the brown live wire connects to the brown live wire and the same for the earth to the earth and the neutral to the neutral wires.
- 4. Push all the components back into the barrel and screw in the ends.
- 5. Tighten the cable clamp screws to secure the cables. Finally please note that these are reversible for different thicknesses of cable.