
Installation instruction for SINAEM1 / SINAEM2

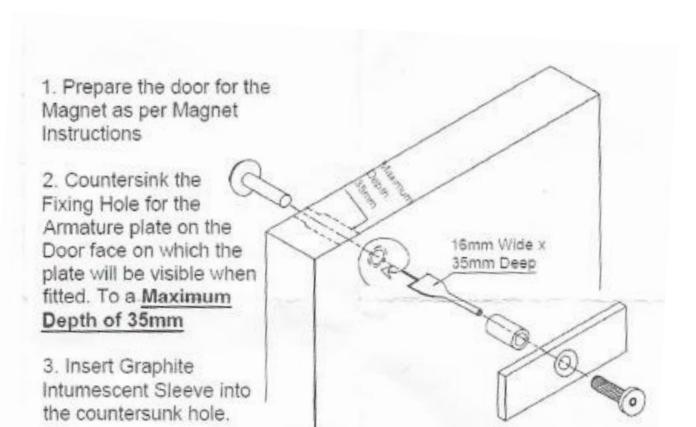

- 4. From the other door face insert the Bolt Reciever ensuring the shaft enters the Graphite Sleeve.
- 5. Position the Armature Plate over the countersunk hole and secure to door using the Threaded Bolt.

T/AEM#075 29/01/2019