



aperta

WI-FI DOOR STATION




esp[®]

www.espu.com





aperta

System Overview



Kit contains:

- Wifi door station
- 12vDC (500mA) power supply
- 10DB Wifi Antenna
- Micro SD card (pre-installed)
- Hex key
- Reset pin tool
- LAN terminal
- Wire connectors
- Screws and rawl plugs

Optional accessories:

EVBP5BB
Lock power supply



EV-EXIT
Push to release



EV-EBG
Emergency release



EV-ML-250/500XT
Electro-magnetic lock




ENTERD
Electric lock





Connections


It is recommended the door station is programmed prior to installation.

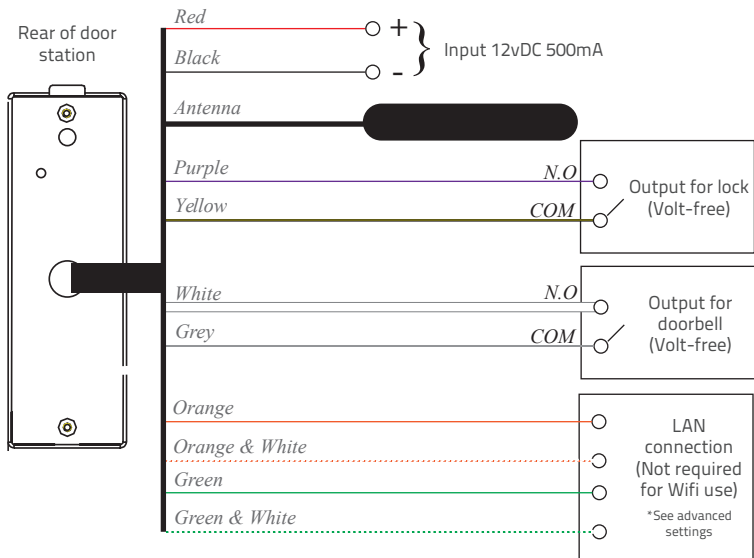



aperta


Installation

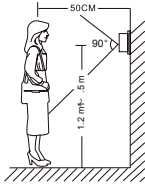

Site the door station 1.5 meters from the ground, or to suit application.

Position camera in the direction of where a visitor will stand during operation.

Avoid areas of high sunlight and noise levels.

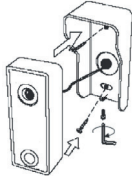

Surface mount the sunshield of the door station and connect the system cabling.

Mount the camera to the sunshield by fixing with the supplied hex screw.



All system connections are to be made inside the building, this includes the siting of the antenna.





aperta 


System set up

Please ensure the following;

1. The user's smart-phone is connected to the Wi-Fi network.
2. The Door Station is within the network's Wi-Fi range.
3. The network's key/password is available.

Whilst the door station is powered, the rear tamper switch will be active. Ensure the tamper switch is suppressed during setup.

If the tamper alert is activated the alarm will sound for 60 seconds, or bypassed by powering down for 10 seconds


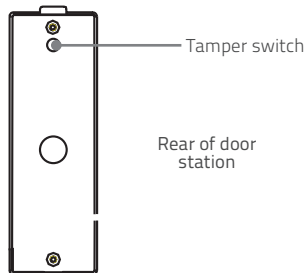




aperta

Step One:

Connect the Antenna and power supply to the door station. Apply power.
The Micro SD card is pre-installed and is not accessible.

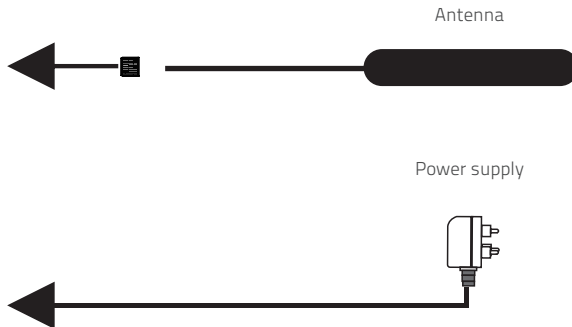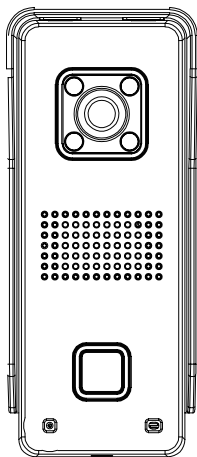




aperta 

Step Two:

After 60 seconds of the power applied. The door station will sound a registration tone every 5 seconds.

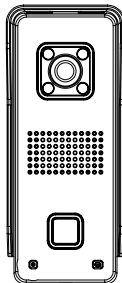


If the **registration tone is not heard**;

Press and hold the Reset button on the rear of the door station for 5 seconds using the supplied reset pin tool.

A 'ching' tone alerts the reset has been successful.

After 60 seconds the registration tone will sound every 5 seconds.

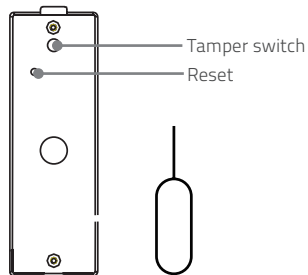




aperta

Step Three:

Download the required APP by searching for **ESP Aperta** on the APP market.

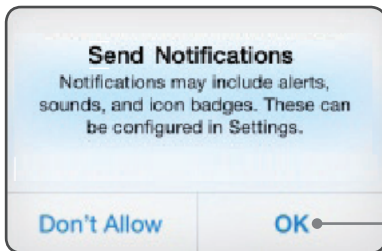

Once installed open the APP and allow any notifications to be enabled;








Step Four:

Follow the on screen instructions to register an account;

1. Select 'Register'
2. Input email
3. Create Password
4. Select 'Login'

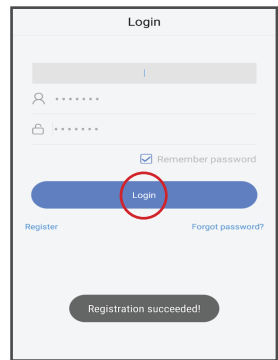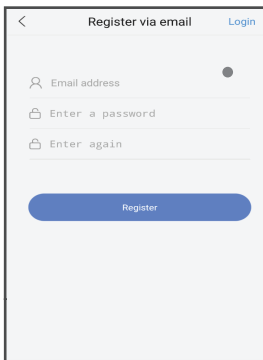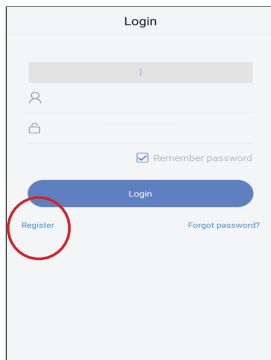




aperta

Step Five:

Login to the APP

1. In the Device list select the '+' symbol
2. Select 'Add New Device'
3. Select 'Smartlink'

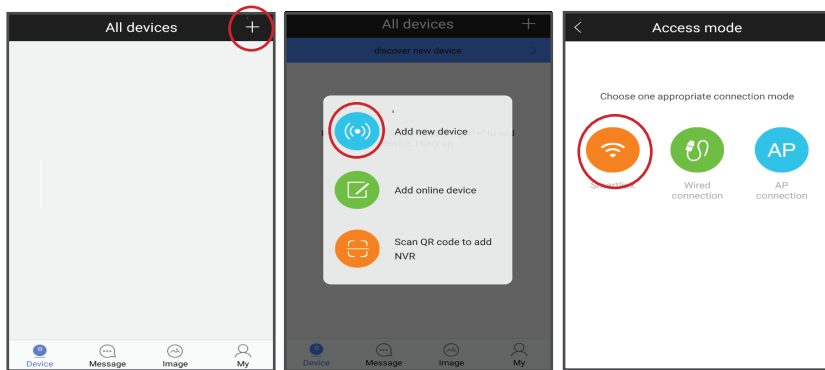






aperta 

Step Six:

1. Enter Network Password and Select 'Next'

2. Ensure the Door station is sounding the registration tone and Select 'Hear a beep ...'

3. Follow the on screen instructions

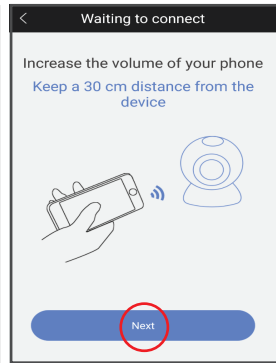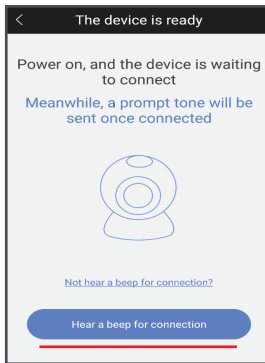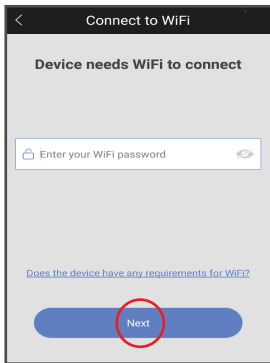





aperta

Step Seven:

1. Hold smart phone close to door station and follow the prompts on screen

2. Enter a name for the door station and enter the default password 123

3. The door station will appear on the device list page

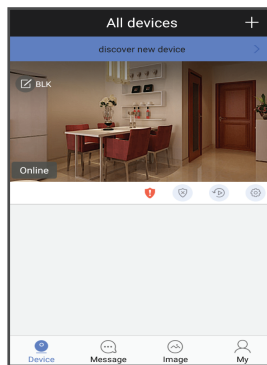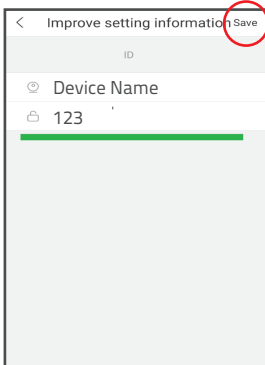




Step Eight:

Review APP notification settings;

1. Select 'Settings' menu
2. Select 'Alarm Settings' menu
3. Ensure 'Receive Alarm Prompt' is enabled.

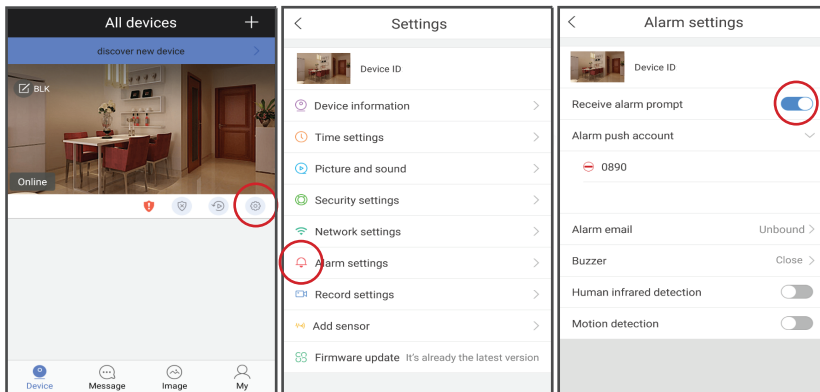



aperta

Step Nine:

Press the call button on the Door Station to test alerts



If test is successful;
retest Door Station in
installation position
before fixing.





aperta 

APP Operation

During a Connection



Disable
audio

Image/ Video
snapshot

Lock release
Press and hold for 3
seconds to activate
doorstation lock output






Adding a new user


Install the APP on the new user's smart phone and register an account;

1. Ensure smart phone is connected to the same Wi-Fi as door station.

2. Select the 'Discover New Devices' tab.

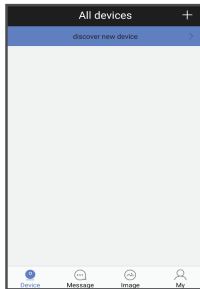


3. Select the '+' on the ID number of the device to be added.

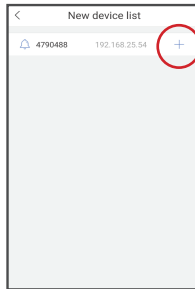

3. Enter a name for the door station and enter the default password 123.

4. Select 'Save'

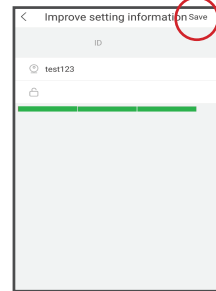





Set Time and Date

From the device list tap once and select Settings;


1. Select 'Settings'

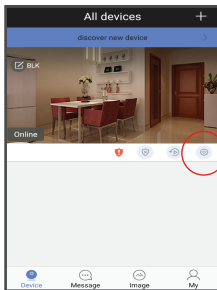

2. Select 'Time Setting'

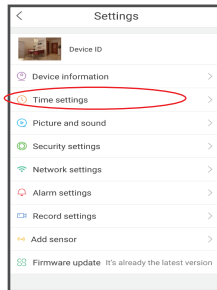

3. Adjust accordingly

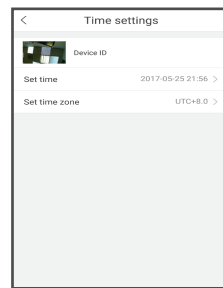




aperta


Record Set Up

Ensure that the time and date is set correctly


1. Select 'Settings'

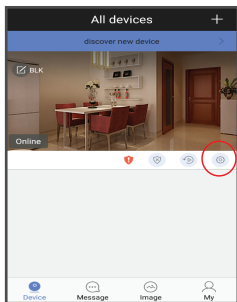

2. Select 'Record Settings'

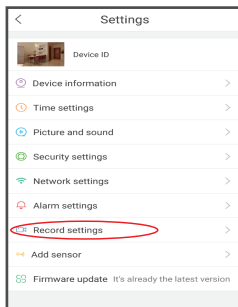


3. Select 'Format SD card'

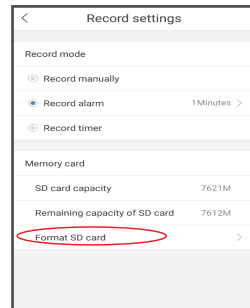





1. Select 'Settings'

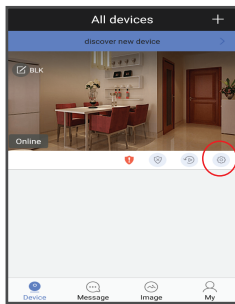

2. Select 'Record Settings'

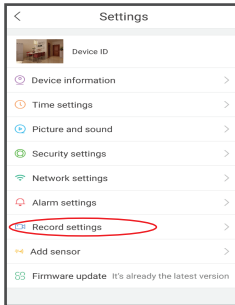

3. Select 'Record Alarm'


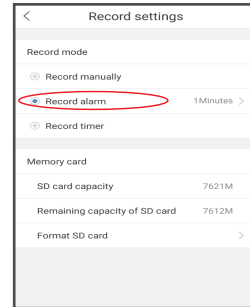




aperta

Record Playback

From the Device list tap once and select 'Playback';

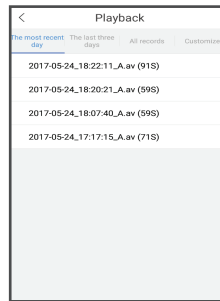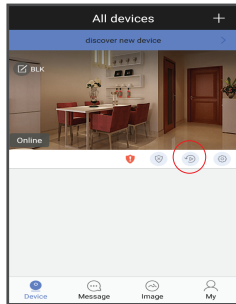

If recordings cannot be seen, please ensure the time and date has been set and the SD card formatted before re- attempting.





Notes on Best Performance

Network Connection

Wi-Fi devices rely on a strong and stable signal from the network. Performance and reliability of Wi-Fi devices can become unpredictable if the signal strength is not sufficient for whatever the reason.

If Wi-Fi signal is a possible issue, one solution is the numerous Wi-Fi signal enhancing devices on the market to improve a network's performance.

Another solution is to use the LAN connection facility where applicable.

In addition, network connection for all devices (Wi-Fi or LAN) is limited by the bandwidth allowance of the network, ensure that the bandwidth is suitable for the number of devices which are being supported.

Please note; APWIFIDS requires the network to use 2.4GHZ Wi-Fi signal band.

APP Connection

Viewing from a mobile phone relies on a strong Wi-Fi signal or ensure a strong 3G or 4G signal is available.

For IOS it is recommended that the APP is left running in the background in order to benefit from the best performance.

For Android, the APP must be left running in the background to receive any service from the Door Station.

ESP are unable to guarantee that every device will be compatible with any ESP product and software supplied. Specific models of phone, tablet or other device, the hardware it contains, the service provider, the types of data services offered and specific phone / device plan will all affect the performance of PC / mobile device for remote viewing.



Support Guide

Setup

If there are any issues encountered in the setup steps 1-9;

- Check the correct APP has been installed
- Check the Door Station has sufficient power. Power OFF door station for 10 seconds and reapply power , then default the Door Station as instructed in Step 2, and re-attempt setup.

If issues persist; refer to the notes on best performance before re-attempting setup.

Specification


| | |
|-------------------------|---------------------------------------|
| Image sensor | 1/4" colour CMOS Sensor |
| Compression | H. 264 |
| Resolution | HD: 1280*720; SD: 640*360; LD 320*180 |
| Memory | 8GB Memory inside. |
| Lens | Fixed 2.1mm 110° / 3.6mm 60° |
| Sensitivity | 0Lux (IR ON) / 0.5Lux (normal) |
| IR LED | 4 x Φ4 |
| Night vision distance | Max. 2 meters |
| IR-CUT | Included |
| Wifi antenna | 10DB |
| Size | L55 x W40 x H129mm |
| Power supply | DC 12V 500mA <12W |
| Max. current of relay's | <3A |
| Working Humidity | 10% ~ 80% no condensation |
| IP level | IP65 |



aperta 



LAN Connection

Rear of door station

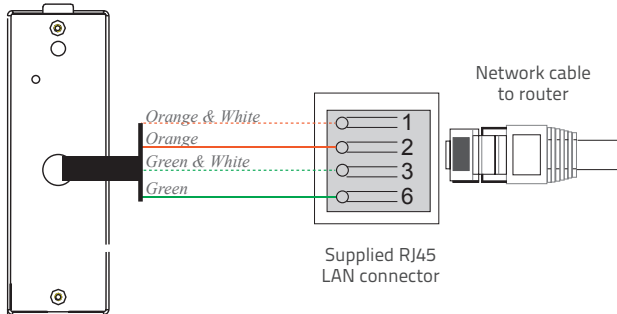

LAN setup

1. Select the '+' symbol

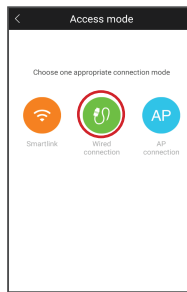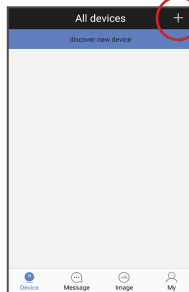

2. Select 'Wired Connection' and follow the on-screen instructions.





CE

Elite Security Products

Unit 7, Target Park,
Shawbank Road, Lakeside,
Redditch B98 8YN



Telephone: 01527 51 51 50

Fax: 01527 51 51 43

Email: info@espuk.com

www.espuk.com

E80E - Errors and omissions excepted.E17

